


MAG BOX TV INSTRUCTIONS

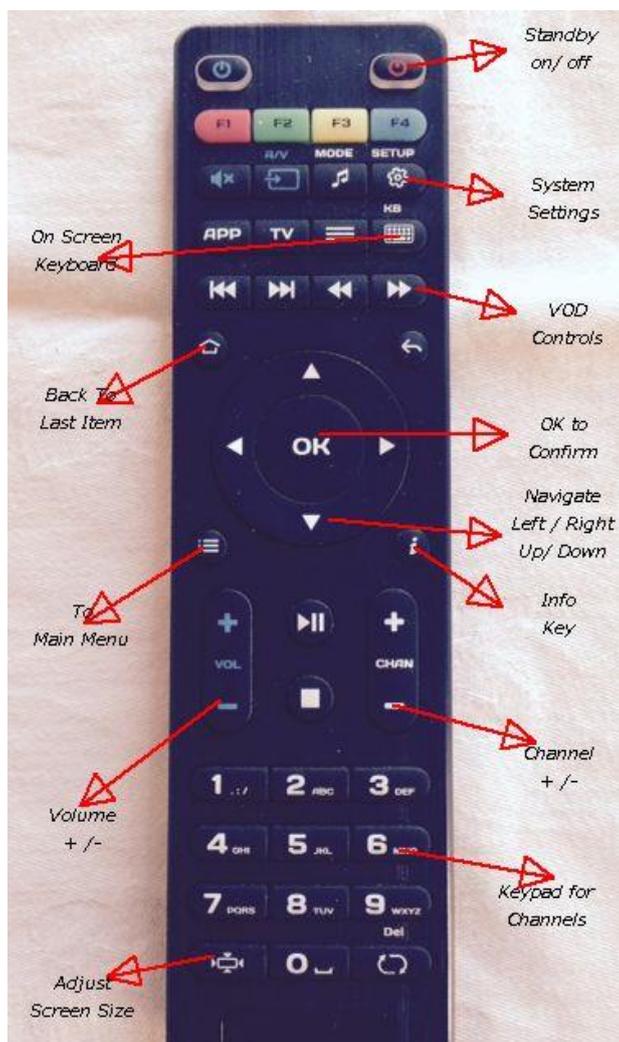

New Remote Control



Old Remote Control



The top RED on off button turns box between standby and on. We recommend not disconnecting the power every night, leave on standby. The box will automatically go to standby when not in use.

Select Menu or the Main Menu key

STALKER

THURSDAY, JANUARY 16, 2014 5:49 PM

Exchange rate on 16.01.2014
100 USD 799.3000
100 EUR 1087.5276 ↓4.8757
10 RUB 2.3963 ↓0.0084

CULTURE
FOR ADULTS
ALL
INFORMATION
ENTERTAINMENTS
CHILDREN'S

Odessa
21° C
Clear
Comfort: 21° C
Pressure: 737 mm Hg
Wind: ↓ 5 m/s
Humidity: 64%

MEDIA BROWSER TV VIDEOCLUB

4.8.73 (0.2.16-r2-250)

This is your home page and you can use the left and right arrows to navigate through the menu options. There are two options, TV (for live TV and Catch Up) and VIDEOCLUB (for movies). Simply press OK when you wish to enter an option and EXIT or MENU when you wish to return to the home page.

Select TV and click OK – Then select ALL and click OK. You will be delivered to the electronic program guide. Here you can see the TV channels listed down the left hand side. A small preview of what is currently showing on the right hand side and below the preview window the next few hours of shows for that channel.

TV / ALL / BY NUMBER /

2:14 PM

1 BBC1 London
2 BBC1 (Low)
3 BBC1 (HQ)
4 BBC Red Button 1
6 BBC1 Scotland
7 BBC1 Wales
9 BBC2
10 BBC2 (Low)
13 ITV1
14 ITV1 (Low)
16 Channel 4
17 Channel 4 (Low)
19 Channel 5
20 Channel 5 (Low)

BACK

LIVE

01:45 PM - Neighbourhood Blues
02:15 PM - Bargain Hunt
03:00 PM - BBC News at One
03:30 PM - BBC London News
03:45 PM - Red Rock

TV GUIDE

PAGE 1 OF 3. FOUND 36 RECORDINGS.

VIEW SORT FAVORITE MOVE

Simply select OK to watch the channel and select EXIT to return to the program guide or MENU/ Main Menu key to go to the home page.

Catch-Up Service - From the program guide arrow up or down until you reach the channel who's catch up you would like to view. **Catch-up channels are indicated by the small clock logo next to channel names.** Select the channel and click OK.

Press the right arrow button to enter the catch-up section. Use the left arrow to access the dates and then move up or down until you find the required date – press OK.



On the right hand side you will now see all the catch up programs available. Select the required program and press OK. You can use the play/ pause/ rewind and fast forward button on the remote to pause and move through the program as you wish.

The box volume can be increase and decreased via the remote as can moving up and down channels without accessing the program guide, just by using the buttons below the OK.

Pressing the bottom left hand button will change your TV screen dimensions.

Please DO NOT try and view the HD channels as the picture may freeze

Problems:

If you do not see the menu screen check the SOURCE or INPUT button on the TV remote to make sure it is on the correct HDMI connection. If for any reason your box freezes and you are unable to access any areas simply remove the power supply from the back of the box, wait 10 seconds or so and reconnect.

If your screen shows a message saying 'page loading error' there is an issue with your internet connection. Unplug your internet router, wait 10 – 20 seconds and reconnect. This will take some time to connect back on to the internet so please be patient.